

INSTALLATION INSTRUCTIONS

The REC MX engine plugs are designed to be an OEM replacement and use the OEM o-rings. Simply remove the OEM plugs and replace with the REC MX plugs using the o-rings from the OEM plugs. Make sure the OEM o-rings are in good condition and the plugs are clean and free of any debris. Apply o-ring grease or engine oil to the o-rings and tighten each plug to the specified torque.



DISCLAIMER: All REC MX products are inspected prior to packaging. Our guarantee is limited to the replacement of defective products and its components only. This limited guarantee is for manufacture defects only for 30 days from date of purchase. Buyer assumes all risk for any and all damage caused to him or herself, a third party and/or property by virtue of this product. By installing and/or using a REC MX product, you hereby accept and understand these stated terms and conditions and have followed all instructional steps. Thank you.