




BILLET RADIATOR BLEED PLUG

2014-2016 HONDA CRF250R / 2013-2016 HONDA CRF450R
RECRP01-RD (RED) / RECRP01-BK (BLACK)

INSTALLATION INSTRUCTIONS

Make sure your engine is off and coolant temperature is cooled off before starting. Do NOT attempt to remove radiator plug if radiator feels hot to touch.

The REC MX radiator plug is designed to be an OEM replacement. It uses the OEM o-ring and comes supplied with a new o-ring. Place the bike on a bike stand on flat, level ground. Simply remove the OEM plastic plug with a phillips screwdriver. Replace the OEM plug with the REC MX plug and o-ring using a 6mm allen wrench. Make sure the plug is clean and free of any debris. Apply o-ring grease to the o-ring and tighten the plug to the specified torque (8 ft-lbs/ 11 N-m). Caution: over tightening the plug can cause damage to the threads.

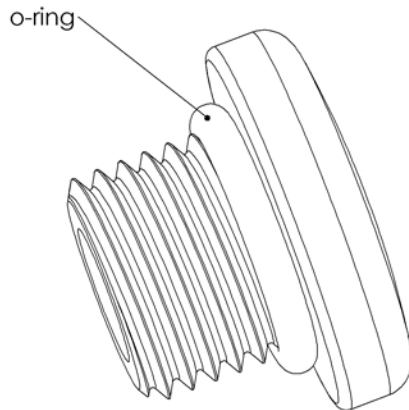

DISCLAIMER: All REC MX products are inspected prior to packaging. Our guarantee is limited to the replacement of defective products and its components only. This limited guarantee is for manufacture defects only for 30 days from date of purchase. Buyer assumes all risk for any and all damage caused to him or herself, a third party and/or property by virtue of this product. By installing and/or using a REC MX product, you hereby accept and understand these stated terms and conditions and have followed all instructional steps. Thank you.